




# Abrasion Pads & Sleeves

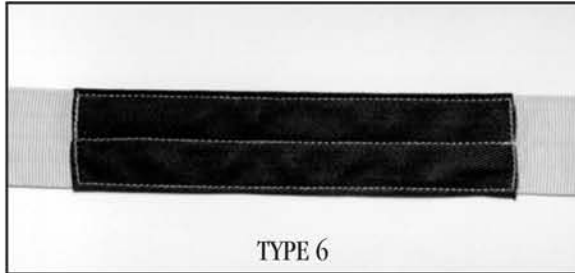


TYPE 6

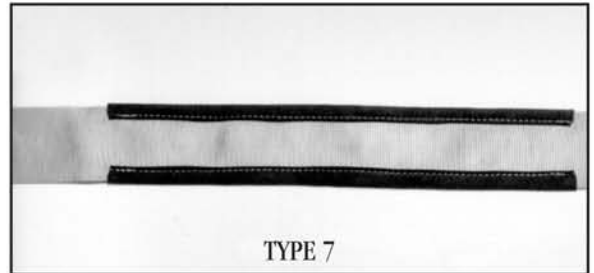

TYPE 7

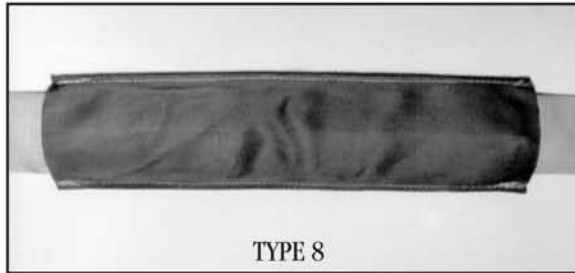

TYPE 8

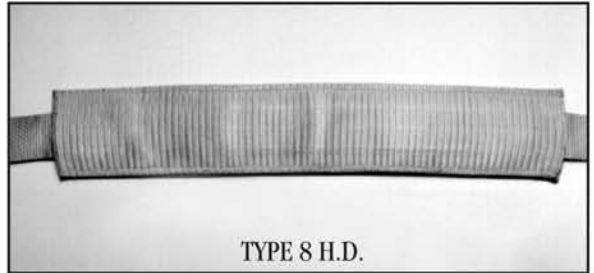

TYPE 8 H.D.

**TYPE 6:** A cordura buffer pad is sewn on to give fixed protection at expected wear points. They can be sewn anywhere on the sling, at any length, on one side or both sides. \*

**TYPE 7:** A cordura buffer web is sewn around the edge of the sling. May be necessary for certain applications where the sling edges are subject to damage. \*

**TYPE 8:** A cordura buffer is sometimes called a sliding sleeve. It is ideal for handling material with less rounded edges because the sleeve does not move when the sling stretches and adjusts to the load. \*\*

**TYPE 8 H.D.:** The heavy duty Type 8 is made of 9800# nylon webbing. This sleeve is twice as thick as cordura and more feasible around rough, abrasive lifts.

*\* Type 6 & Type 7 can be combined to create a full body wrap.*

*\*\* Type 8 Quick sleeve with velcro one side available upon request.*

